ROSEN ENTERTAINMENT SYSTEMS

T10™ All-In-One Entertainment System

T12™ All-In-One Entertainment System

Rosen T10/T12 Quick Reference Card

TURN ON THE SYSTEM

a. Turn vehicle ignition to ON or ACC

b. Press POWER on the remote (FIG 2) or OPEN on the front control panel (FIG 1).

NOTE: The operating temperature range of the system is from 32° to 140° F.

FRONT CONTROL PANEL

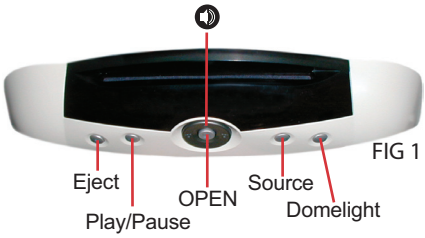

FIG 1

REMOTE

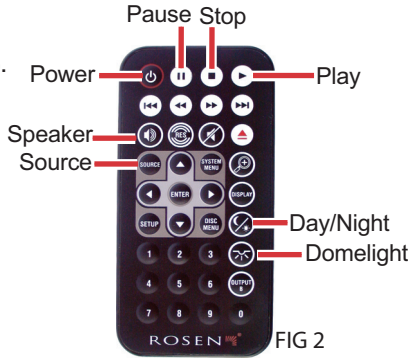

FIG 2

PLAY A DVD OR CD

a. Press and release the SOURCE button on the remote (FIG 2) or the front control panel (FIG 1) until "INTERNAL DVD" appears.

b. Insert a disc, label side up, into the disc slot (FIG 3). Most DVD's and CD's will load or play immediately. If a DVD menu appears on the screen, press PLAY (FIG 2) on the remote or overhead control panel.

FIG 3

USE THE HEADPHONES

a. Turn on by pressing the ON/OFF button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries are inserted properly.

b. Turn down the volume knob on the ear piece. Put over ears and re-adjust volume.

Note: The headphones must have a clear line of sight to the T10/T12 screen to operate properly.

FIG 4

ROSEN ENTERTAINMENT SYSTEMS

T10™ All-In-One Entertainment System

T12™ All-In-One Entertainment System

Rosen T10/T12 Quick Reference Card

PLAY INTERNAL VIDEO GAMES

a. Press any button on the game controller to activate. Make sure that the controller A/B switch is set to “A.” The Controller LED will blink when ready.

b. Press the SOURCE button on the front control panel or on the remote control until “INTERNAL GAME” appears on the screen.

c. Use the game controller's left and right arrow keys to choose a game.

d. Press the START button on the game controller to choose the game.

e. Use the "A & B" buttons for fire, jump or other action.

f. Press RESET to return to the main menu.

GAME CONTROLLER
FIG 5

LISTEN OVER VEHICLE SPEAKERS

a. Press the SPEAKER on the remote control (FIG 2) or press and on the control panel (FIG 6) for five seconds. The screen will display: “SPEAKER SOUND on 87.9 Press ◄ ► to adjust”

b. Turn the vehicle’s radio on, and tune to the FM frequency set by the installer (*see Owner’s Manual for more detail*).

c. Make sure radio and T10/T12 are on and set to the same FM frequency.

FIG 6

ROSEN

www.rosenentertainment.com

RES PN 9101047-90 - REV A